


# Installation guide

## SOMERO 3

**Code: CT-IN-03**

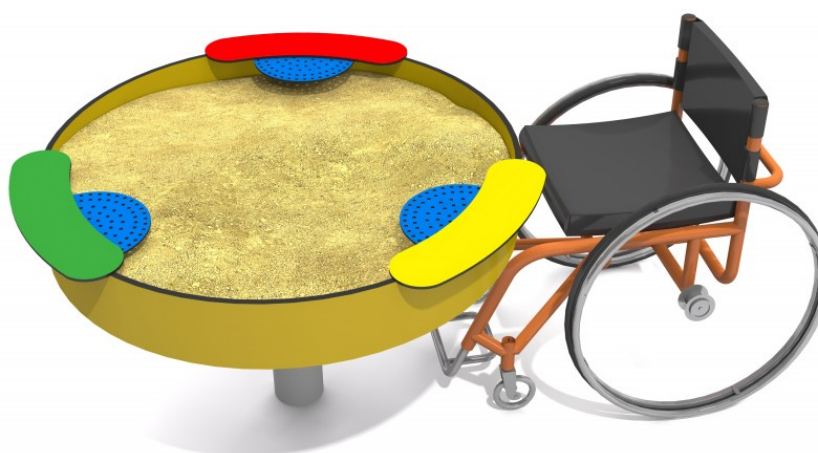



## **The sequence of assembly of the sandbox:**

1. Embed the mounting element in the concrete in accordance with A-A section.
2. Connect the flange with the plate - step 6.7.
3. Assemble the tables according to step 8.9.
4. Check all screw connections and stability all items.
5. Remove the securing tapes.
6. Check the level and condition of shock-absorbing surfaces fall.